

FDDHE Extension Décorative Topaz Instructions d'installation

- 1) Découper le gabarit de perçage à l'aide d'un couteau "X-ACTO" et d'une règle de métal.
IMPORTANT : ne pas utiliser de ciseaux.
- 2) Positionner le gabarit sur le replis de la base du foyer, à gauche, puis faire une marque de perçage. Répéter la même opération à droite et s'assurer que la distance entre les marques des trous soit de $25 \frac{3}{4}$ ".



- 3) Si la distance entre les marques est bien de $25 \frac{3}{4}$ ", percer deux trous à l'aide d'une mèche de $5/16$ " de diamètre.
- 4) Placer l'extension décorative, côté acier vers le haut, insérer les deux vis dans les trous préalablement percés et serrer en utilisant les rondelles et écrous fournis.





FDDHE Topaz Decorative Hearth Extension Installation Instruction


- 1) With an "X-ACTO" knife and a metal ruler, cut out the template.
IMPORTANT : do not use scissors.
- 2) Position the template on the lap at the base left corner of the fireplaces then make a drilling mark. Repeat this operation for the right side. Make sure the distance between the marks is $25 \frac{3}{4}$ ".



- 3) After making sure the distance is $25 \frac{3}{4}$ ", drill two holes with a $5/16$ " diameter bit.
- 4) Place the Decorative Hearth Extension, steel facing up, insert both screws into the previously made holes and tighten them using the supply nuts and washers.




Gabarit de perçage/
Template

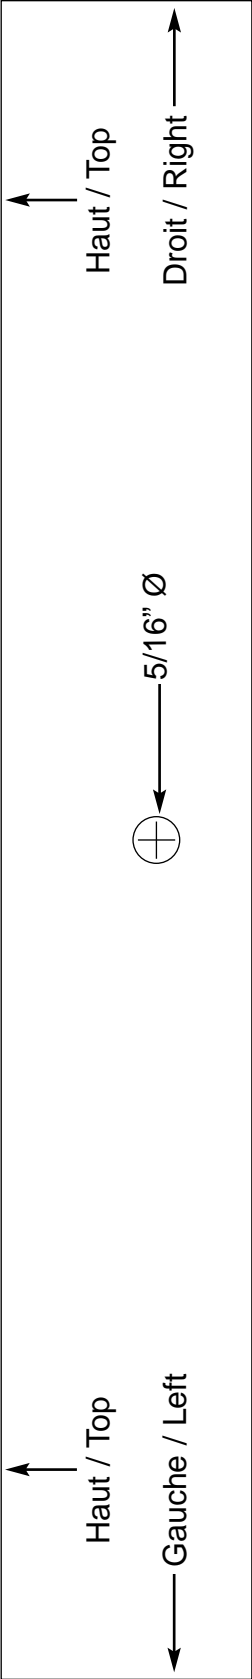

Decorative hearth extension (FDDHE) **TOPAZ**

Check List

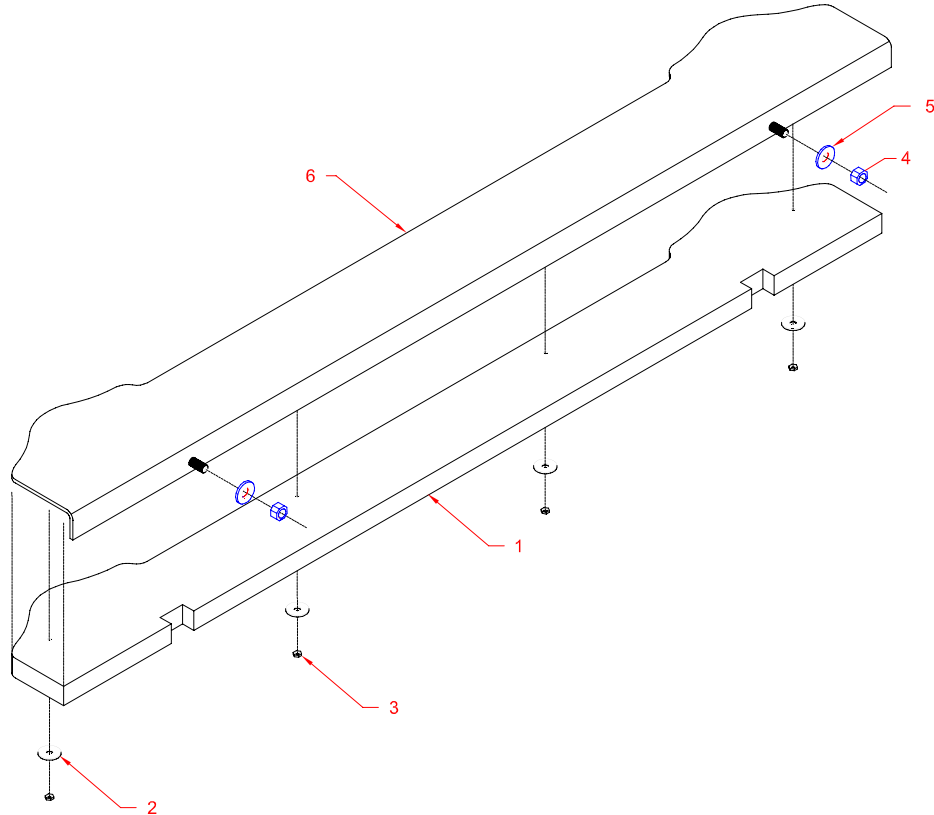

In box (14.15.33):

Wrapped in brown paper

- 7: (1x) Installation instructions (FD-FHE-inst)
- 6: (1x) Decorative hearth extension shelf assembly (1.13.DHE.1.T)
- 5: (2x) Washer 1/4" (904002)
- 4: (2x) Nut 1/4 - 20 (906005)
- 3: (4x) Nut CD 8-32 hex (906004)
- 2: (4x) Washer 13/64" I.D. x 3/4" O.D. (904014)
- 1: (1x) Decorative hearth extension wood insert (979014)

Initials